

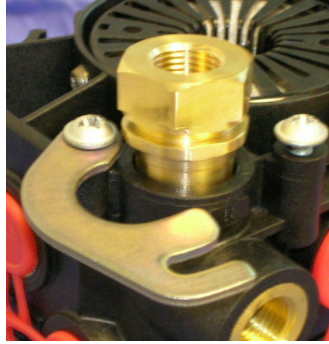
Haldex Brake Products Ltd

Moons Moat Drive
Moons Moat North
Redditch, Worcestershire, B98 9HA
Tel: (+44) (0) 1527 499 499
Fax: (+44) (0) 1527 499 500

Integrated Double Check Valve replacement
950 800 904 = Kit contents

Recommended Changes
026 5005 09 x1 (shuttle)
024 5052 09 x 1 (o ring)
024 5058 09 x 1 (o ring)
042 7084 09 x 1 (grease)

Optional Changes
051 5102 09 x 2 (M6x18 Screws)
015 5063 09 x 1 (Retainer plate)
016 7183 09 x 1 (Insert)
016 7182 09 x 1 (Shuttle Housing)

Remove the insert by hand pulling it away from the EB+ valve

Remove the old shuttle and replace with the new one which should be greased

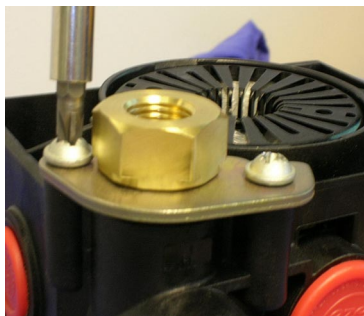
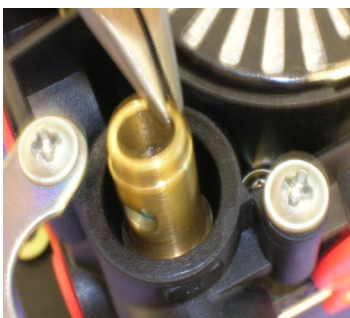
950 800 904 = Kit contents

Recommended Changes
026 5005 09 x1 (shuttle)
024 5052 09 x 1 (o ring)
024 5058 09 x 1 (o ring)
042 7084 09 x 1 (grease)

Optional Changes
051 5102 09 x 2 (M6x18 Screws)
015 5063 09 x 1 (Retainer plate)
016 7183 09 x 1 (Insert)
016 7182 09 x 1 (Shuttle Housing)

Once the housing is removed you can now see the shuttle housing

Put the shuttle housing back into the valve, taking care not to damage the o ring and the shuttle

Unscrew the two M6 screws by half a turn

Remove the shuttle housing with long nose pliers

Remove the o ring and replace with the new one greased

Swing the retainer plate away from the insert

Once removed the o ring will be exposed. Replace with the new greased o ring

Tighten the screws back by half a turn (hand tight)
