



INFO CENTRE



000 700 097 / 10.98. / Redditch

For further information :

AUSTRIA
Graubremse Wien GesmbH
 Tel: INT + 43 1865 16 40
 Fax: INT + 43 1865 16 4027

BELGIUM
Haldex N.V./S.A.
 Tel: INT + 32 2725 3707
 Fax: INT + 32 2752 4099

BRAZIL
Haldex do Brasil Ind. e Com. Ltda
 Tel: INT + 55 11 531 4159
 Fax: INT + 55 11 531 9515

CHINA
Haldex International Trading (Shanghai) Co. Ltd.
 Tel: INT + 86 21 6289 4469
 Fax: INT + 86 21 6279 0554

FRANCE
Haldex Europe S.A.
 Tel: INT + 333 88 68 22 00
 Fax: INT + 333 88 68 22 09

GERMANY
Haldex Brake Products GmbH
 Tel: INT + 49 711 934 91 7-0
 Fax: INT + 49 711 934 91 7-40

GREAT BRITAIN
Haldex Ltd.
 Tel: INT + 44 1 325 310 110
 Fax: INT + 44 1 325 311 834

POLAND
Haldex Sp. zo.o.
 Tel: INT + 48 34 350 1100
 Fax: INT + 48 34 350 1111

SOUTH KOREA
Haldex Korea Ltd.
 Tel: INT + 82 2 749 3650
 Fax: INT + 82 2 749 3652

SPAIN
Haldex Esoana S.A.
 Tel: INT + 34 9 3573 1030
 Fax: INT + 34 9 3573 0728

SWEDEN
Haldex Brake Products AB
 Tel: INT + 46 418 47 6000
 Fax: INT + 46 418 47 6001

USA
Haldex Midland Corp.
 Tel: INT + 1 816 891 2470
 Fax: INT + 1 816 891 9447



Haldex Brake Products Ltd
 Moons Moat Drive
 Moon Moat North
 Redditch
 Worcestershire
 B98 9HA
 Tel: INT + 44 1527 499 499
 Fax: INT + 44 1527 499 500

INFO CENTRE is a side of trailer mounted diagnostic unit used for readout of odometer and fault codes, plus other information as available in the ABS Electronic Control Unit (ECU). The INFO CENTRE is normally connected permanently to the ECU's diagnostic connection. While the ECU is powered from its normal sources (stoplight or permanent) information is transferred to the Info Centre's memory, which can be recalled. Power is supplied from the vehicle system via the ECU diagnostics connector.

INFO CENTRE comprises an LCD (Liquid Crystal Display) and two buttons marked up/down and right arrows. The up/down button accesses the next main menu item, the left button, marked right arrow, is used for sub menu items. For adjustment of settings a watch style procedure is followed; the up/down button is held down for 2 seconds, then the first digit flashes and can then be increased by pressing the up/down button. The next digit is then selected using the right arrow button and so on.

INFO CENTRE also has an internal battery which allows readout of information (including fault indication) when the trailer is uncoupled and unpowered. It is housed in a plastic enclosure provided with a cover boot for environmental protection.

INFO CENTRE for ADR regulations :
 To satisfy the ADR regulations for flammable loads (i.e. Petrol tanker trailers) a variant of Info Centre and its associated ECU is available WITHOUT odometer function. This is because hazardous load regulations do not permit the fitting of battery powered equipment (spark generators) to the rear of the firewall and so only this variant of Info Centre must be used. All other functions are as standard Info Centre.


Principal Functions:

- Odometer:** Total distance
 Trip distance
 Service interval
 Distance to next Service
 Tyre scale setting
- Diagnostic:** Display Current fault code
 Display Stored fault codes
 Sensor / Cabling check
 Reset-to-Ride (COLAS)
- Testing:** Tacho
 Retarder

ECU

- Information:** Serial number
 Product type code
 Configuration code
 Auxiliary code
 Re-Configure ABS ECU (adding or removing COLAS®)
- Pin:** Security code

Assembly and mounting details :

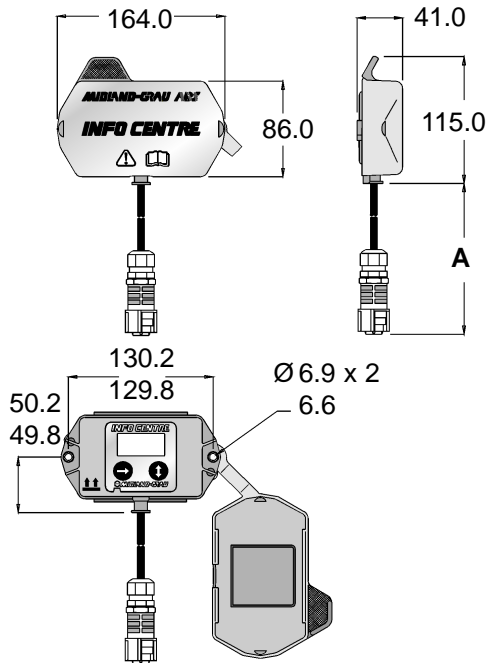

Mass of assembly 0.7Kgs

'A' = 1200mm or 400mm

Installation location :

