

Step 1: Downloading

- a. click on download link
- b. **Save** to a location
- c. when download is complete click **Open** in dialog box

Step 2: Set Up

- a. Click on **setup.exe** within listing
- b. Extract all files (unzip)
- c. Click on **setup.exe** and **Run**

Step 3: Run

- a. Go to **Start, Programs, Haldex, Haldex Trailer ABS Diagnostics**
- b. Create a shortcut and copy to your desktop

Once the installation is completed you are ready to interface to a 9 pin serial com port (COM1 or COM2) or USB port on your computer depending on the adapter you have. See L31154 for hardware connections.

Adapter/ Com Port Configuration Instructions

Use the F7 labeled icon or key for protocol and device configuration:

- If you are using a Haldex PLC J1708 Adapter, the **protocol** selection needs to be set to **PLC** and the **device** selection needs to be set to **COM1** or **COM2** and connected to a 9 pin com port on the PC you are using.
- If you are using the Haldex DLA+ PLC Adapter, the **protocol** selection needs to be set to **PLC** and the **device** selection needs to be set to **DLA+ PLC** and connected to a **USB** port on the PC. To install the latest DLA+ PLC USB drivers, go to www.JPROFleetProducts.com click on Download then Adapter Drivers and choose JPRO DLA+ PLC Adapter. Click on “**Download the latest DLA+ PLC Adapter Drivers**”. Save it to a new folder on your PC and install or click run.
- If you are using an adapter other than Haldex, the **protocol** selection needs to be set to **PLC** if you are using a 9 pin com port (COM1 or COM2), otherwise choose **J1708** if you are using a USB port and select the device adapter you are using.